



Hidden Winch Plate Mounting instructions for D-Max 2012-18

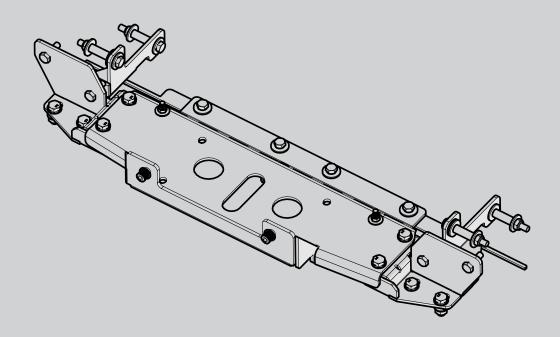

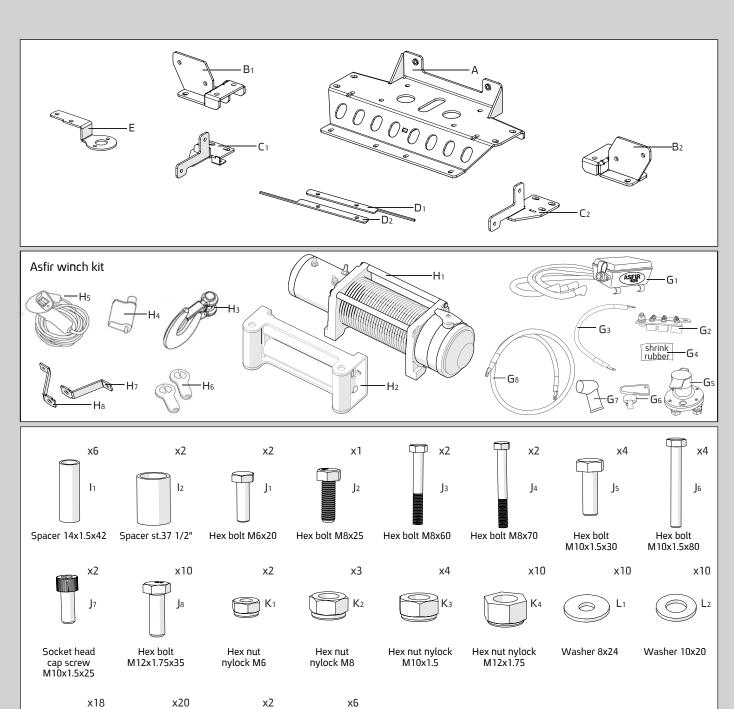



x20







Washer 10x30

Washer 12x24

Spring washer 8 Spring washer 10

Low rubber U shape L-1400mm

Maximum Tightening Torques	
M6 (8.8)	10 Nm
M8 (8.8)	25 Nm
M10 (8.8)	50 Nm
M12(8.8)	85 Nm


















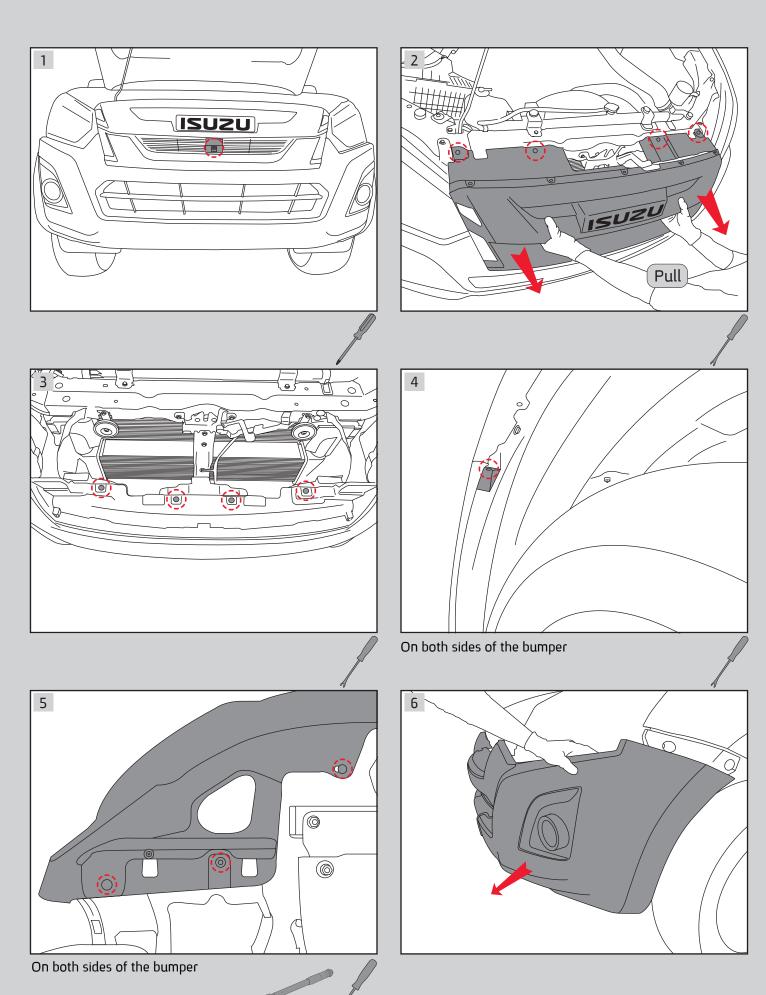




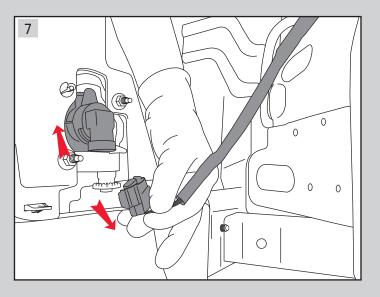


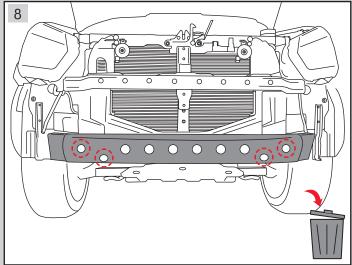



Keep original bolts

On both sides of the vehicle

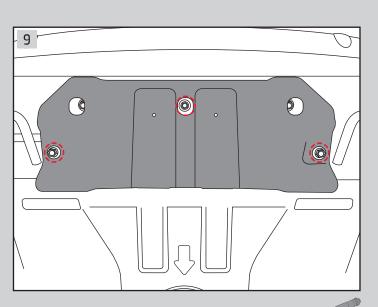

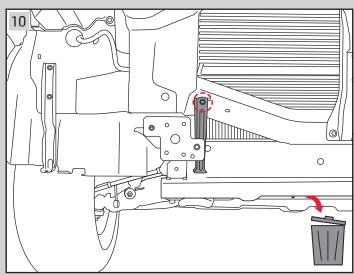

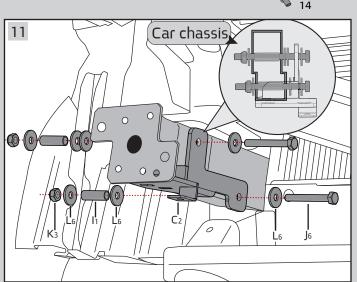

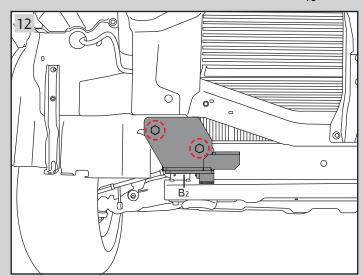


Connect bracket C₁ as shown above to the car chassis on the left side of the vehicle


Use original bolts to connect the brackets. Connect bracket B₁ to the left side of the vehicle with original bolts






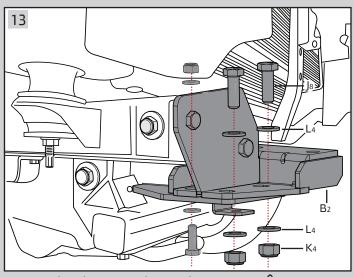



Connect bracket B₁ as shown above to car chassis on the left side of the vehicle

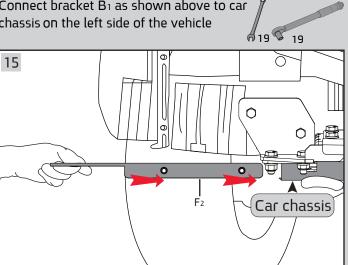


Align palte F₂ holes to plate A holes. Insert palte F_1 on the other side of the car chassis and align the holes

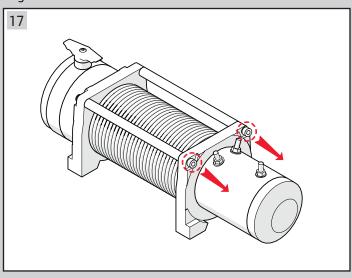


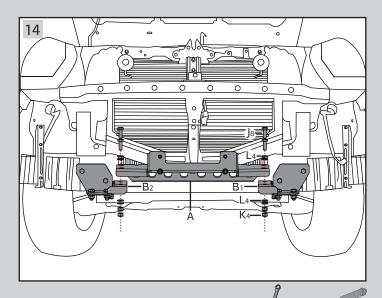

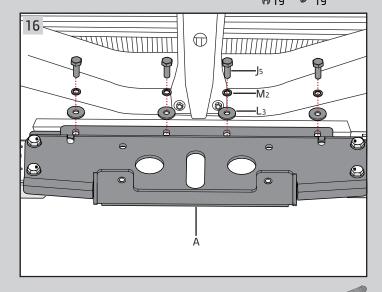


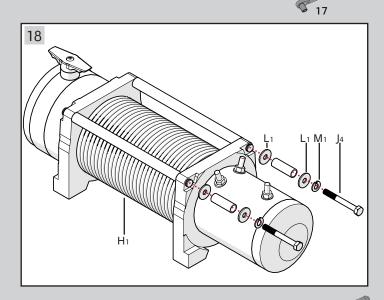




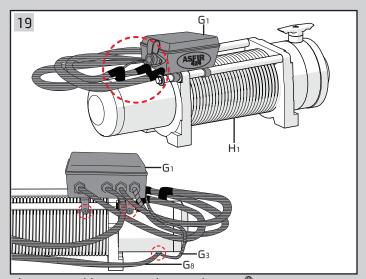


Place control box G1 on the winch as shown above

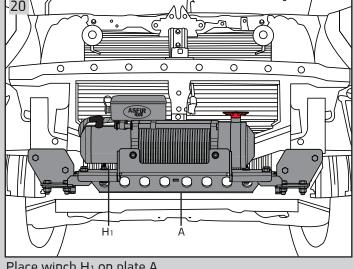


Place winch H₁ on plate A

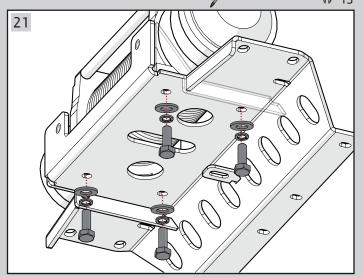


Bolts from ASFIR winch kit

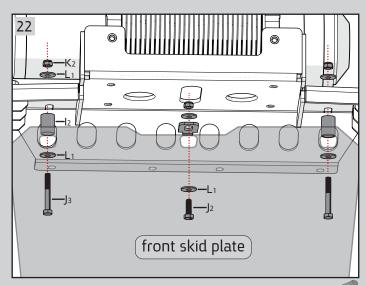


Connect ASFIR front skid plate or original front skid plate

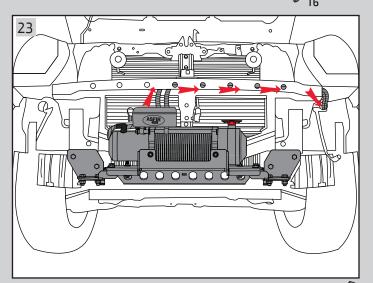



Transfer cables internally as shown above and attach with plastic handcuffs

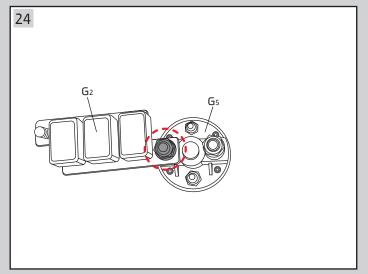





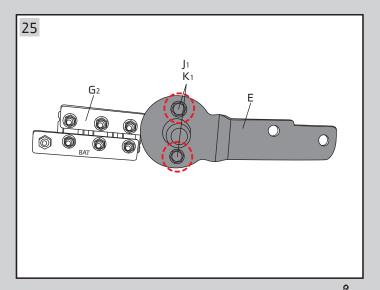


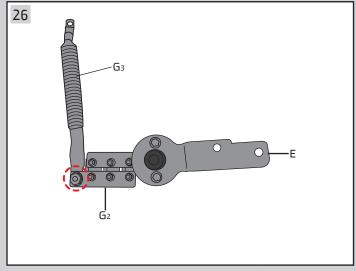

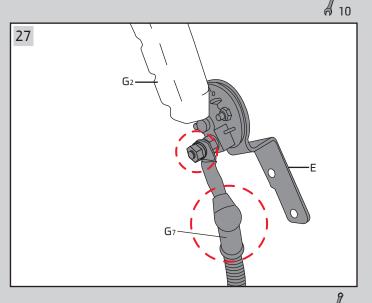

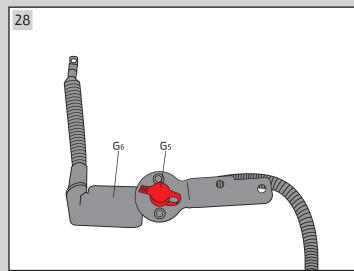

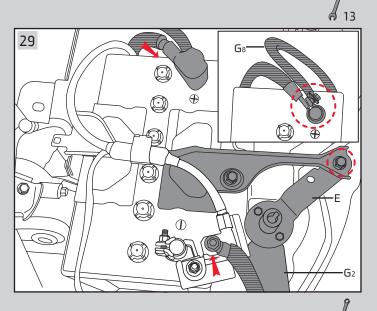

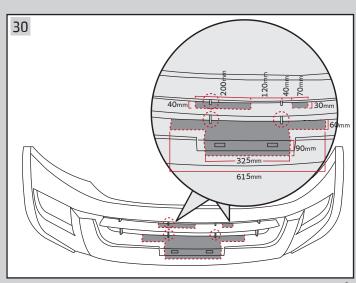

For D-Max 2012-16 - Cut out the bumper as shown on drawing.

Cover the cutting line with rubber profile (N)



